

Simplicity®

*(The chances are you're
never going to read me)*

Owner's Manual

SYNERGY

models X9 & G9



www.simplicityvac.com

Simplicity®

The vacuum you'll *flip* over.™

IMPORTANT SAFETY INSTRUCTIONS	2
Polarization instructions.....	3
Description of the vacuum.....	4
Before using your Synergy for the first time.....	6
Operation	
Unwinding the power cord.....	7
Vacuuming carpet.....	8
Vacuuming hard surfaces.....	8
Dirt sensing display.....	9
Carpet height adjustment.....	9
Vacuuming under furniture.....	10
Carrying the vacuum.....	11
Attachment Cleaning	
Wand cleaning.....	12
Cleaning tools.....	13
Adjusting the suction power.....	15
Optional attachment kits.....	16
Hose disconnect.....	17
Optional hose extension.....	17
Maintenance and Care	
When to change the vacuum bag.....	18
Replacing the vacuum bag.....	19
When to change the filters.....	20
Replacing the filters.....	20
Lifetime belt warranty.....	22
Annual checkup reminder.....	22
Problem Solving Guide	
Full bag or clog indicator light.....	23
Change filter indicator light.....	23
Jammed brushroll.....	24
Thermal motor protection.....	24
Trouble shooting.....	25
How to contact your Authorized Retailer.....	25
Visit Simplicity on-line.....	25
Warranty	26

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING: The manufacturer cannot accept responsibility for damage caused when the appliance is not used according to the instructions, or for uses other than those for which it was intended.

To reduce the risk of fire, electric shock or injury:

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not handle plug or appliance with wet hands.
- **WARNING: ELECTRIC SHOCK COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to your Authorized Retailer for service.
- Do not use without vacuum bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not attempt to service the unit while appliance is plugged in.

 
SAVE THESE INSTRUCTIONS.

Polarization Instructions


POWER CORD, 2-WIRE POLARIZED CORD

Household models: X9 & G9

To reduce the risk of electric shock, this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

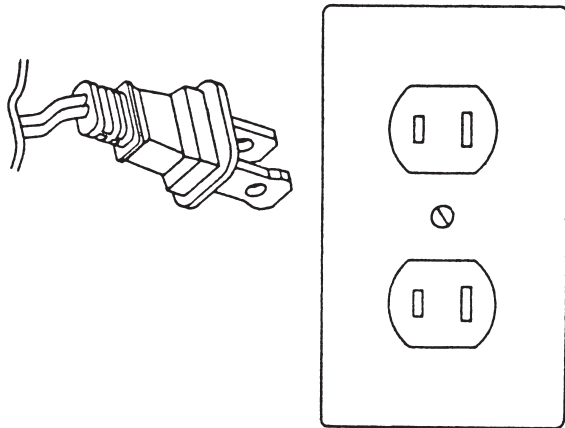

Description of the vacuum

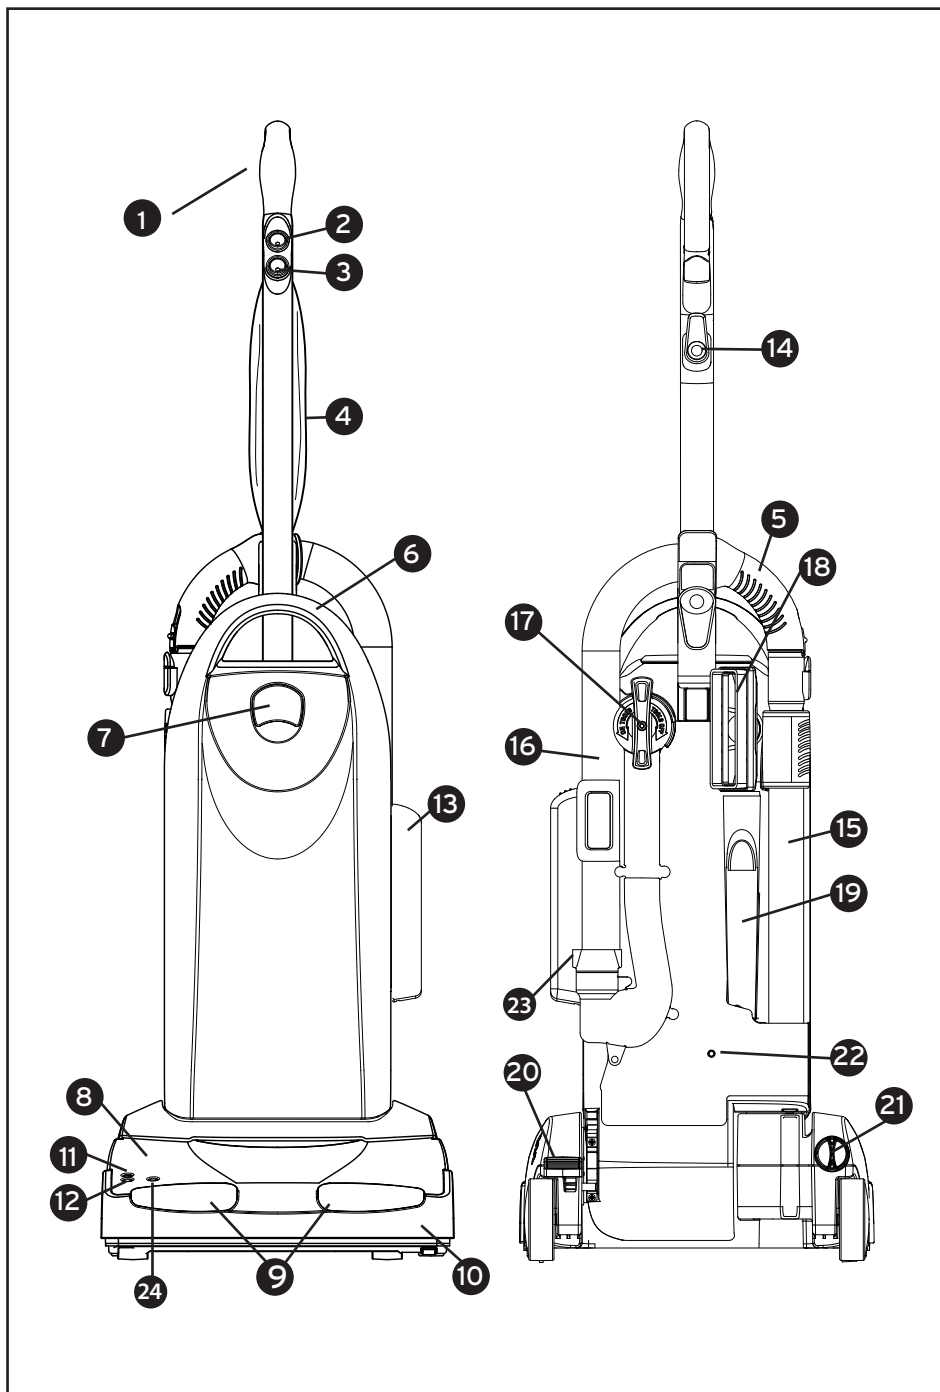 




Description of the vacuum

- 1 ComfortGrip™ handle
- 2 Main on / off power switch
- 3 Carpet / bare floor switch
- 4 35' power cord
- 5 ReadyReach™ tools
- 6 Carrying handle
- 7 Bag compartment latch (to replace vacuum bag)
- 8 Vacuum nozzle
- 9 Twin LED headlamps
- 10 Furniture guard
- 11 Change filter indicator
- 12 Full bag / clog indicator
- 13 Exhaust filter cover
- 14 Quick release cord hook
- 15 Telescopic wand
- 16 5-to-1 stretch hose
- 17 Tool activation dial
- 18 Combination dusting / upholstery brush
- 19 Crevice tool
- 20 Handle release pedal
- 21 Carpet height adjustment dial
- 22 Thermal reset button
- 23 Hose disconnect
- 24 Brushroll jam indicator

Before using your Synergy for the first time


Attaching the handle to the vacuum

   - Remove the handle screw located on the back of the vacuum. Insert the handle downward into the body of the vacuum. Insert screw and tighten.
- Open bag compartment lid to ensure vacuum bag is in place.
- Your vacuum is now ready for use.

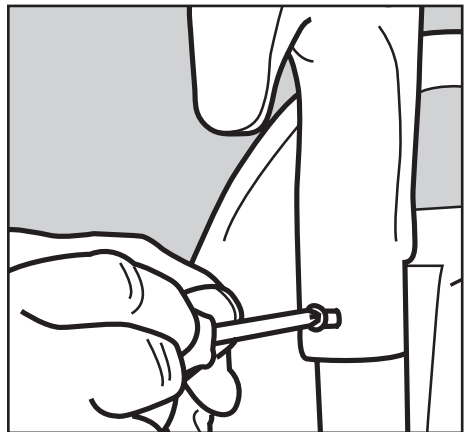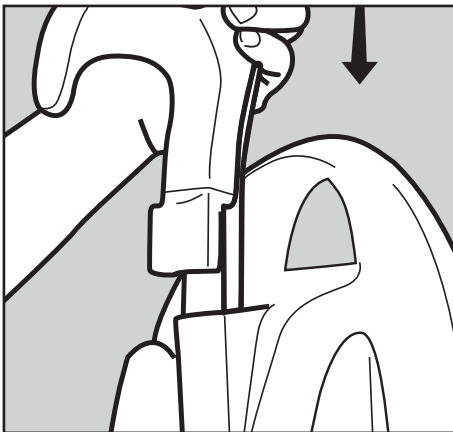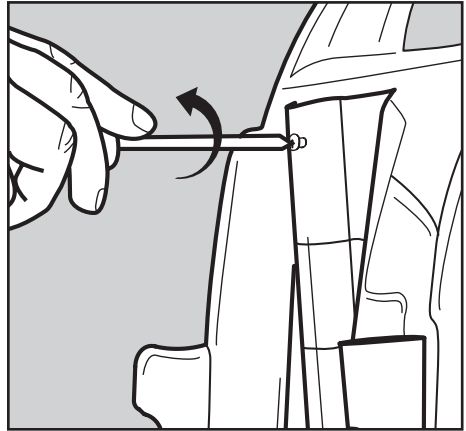

Unwinding the power cord

 - The upper cord hook rotates to allow for quick access to the power cord.

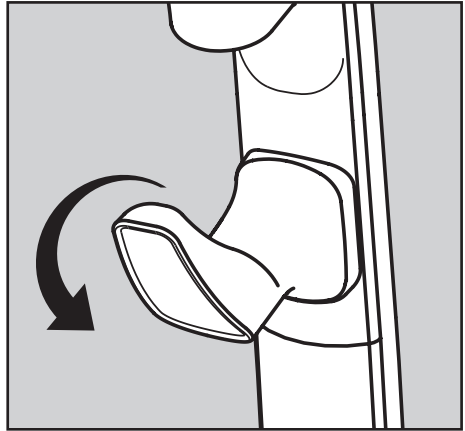

Operation

Vacuumping carpet

 
- For carpet cleaning, press the “on / off” switch on and press the “carpet” switch on. Both lights should be lit.

Vacuumping hard surfaces


- For bare floor cleaning (i.e. tile, wood, or linoleum), turn the main “on / off” button on and the “carpet” switch to floor. Only the “on / off” button light should be on.

Brushroll auto shut-off feature

Note: When the Synergy is turned on and in the upright position, the brushroll will not spin as to eliminate the possibility of damage to floor surfaces. The brushroll will spin when the handle is lowered, provided the “carpet” switch is on.

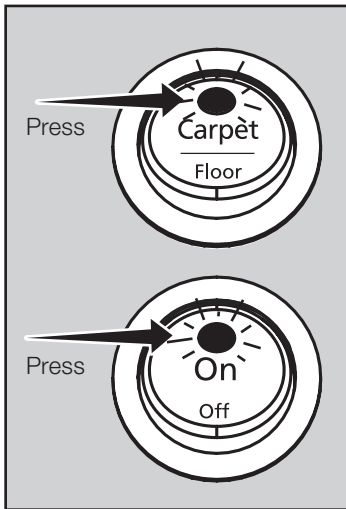

Carpet Cleaning

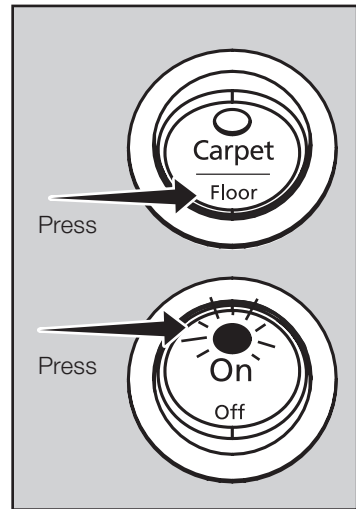 


Bare Floor Cleaning
(Wood, Tile, etc.)

Dirt sensing display (G9 model only)

The Premium Synergy is equipped with two amber lights that illuminate the edges of the cleaning path when your vacuum detects that dirt is being picked up by the machine (while in the carpet cleaning mode). Continue vacuuming this area until the amber lights no longer illuminate.

 When only the white headlights are illuminated, the Premium Synergy has removed all of the deeply embedded dirt from your carpet and you should move on to a new area.

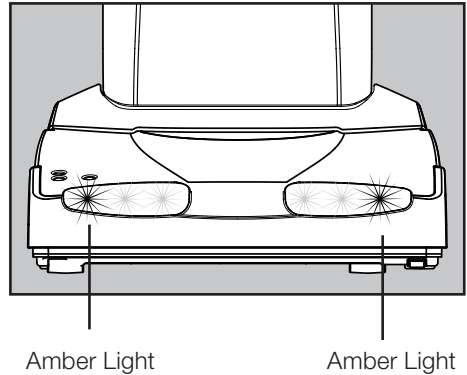


Carpet height adjustment

There are five carpet height settings available designed for various flooring surfaces.

- Locate the height adjustment dial just above the right rear wheel, and rotate the dial to the desired height.

 - X Hi** Plush carpets
- High** Medium pile carpet
- Auto** General setting
- Floor** Hard floors
- X Low** Low pile carpet

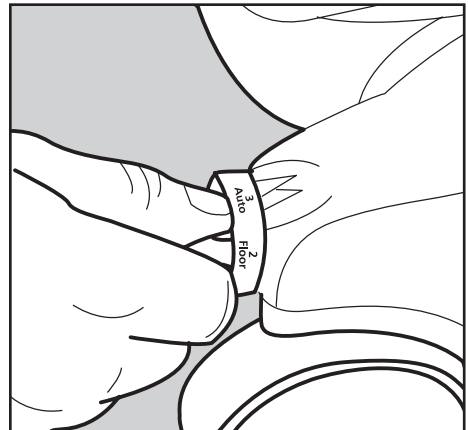




- If it becomes difficult to push the vacuum across the carpet, adjust the dial to a higher carpet setting.

Operation

Vacuuming under furniture


Your Simplicity Synergy will lay flat on the floor for effective cleaning under beds and tables.

   - Press the foot pedal release once for normal vacuum cleaning.
- Press the foot pedal release a second time to enable the vacuum to lay flat on the floor.

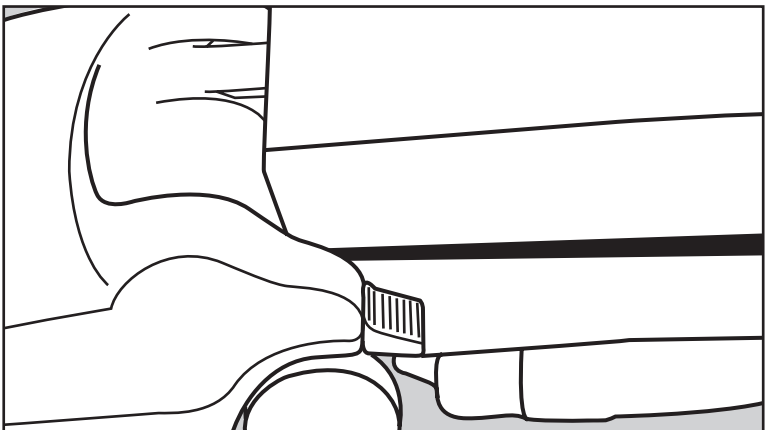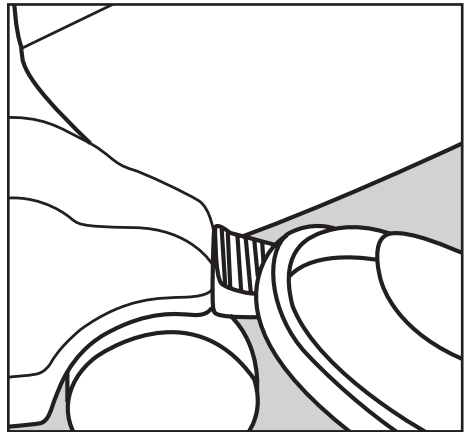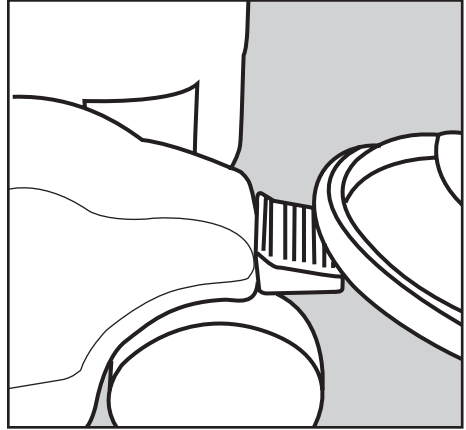

Carrying the vacuum

 To safely transport your vacuum, especially when carrying the vacuum up and down stairs, use the ergonomic carry handle.



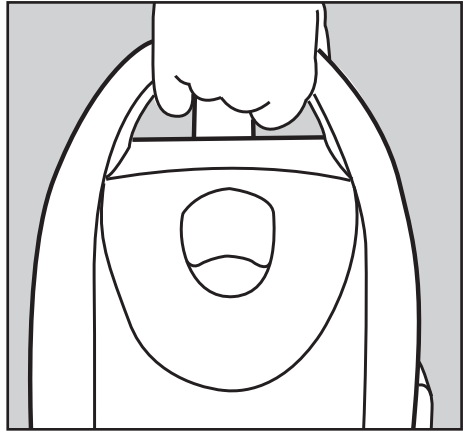


Attachment Cleaning

Wand cleaning

With the on-board cleaning tools and vacuum wand, your Simplicity Synergy becomes a comprehensive cleaning system. Included with your vacuum is an upholstery tool, dusting brush, crevice tool, telescopic wand and a 5-to-1 stretch hose.

   - To use the cleaning tools, lift the wand straight up from the vacuum. Turn the tool activation dial to the “on” position. The cleaning wand is now activated for quick cleaning.
- Extend the wand by grasping the wand release and pushing outward.
- Attach any of the on-board tools to the end of the cleaning wand.
- When finished with tool / wand cleaning, turn the tool activation dial to the “off” position. Insert the wand back into the vacuum and secure the wand by pushing the curved handle into the holder.

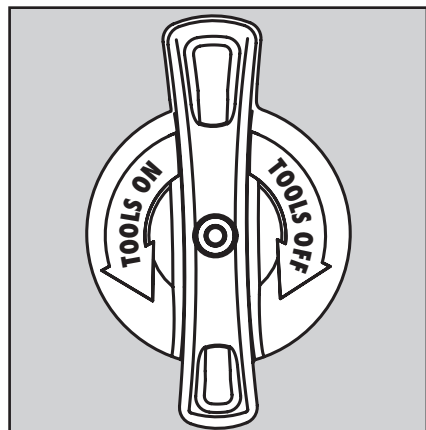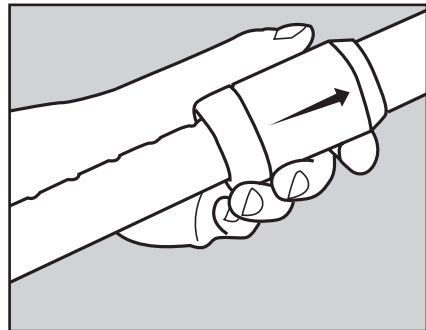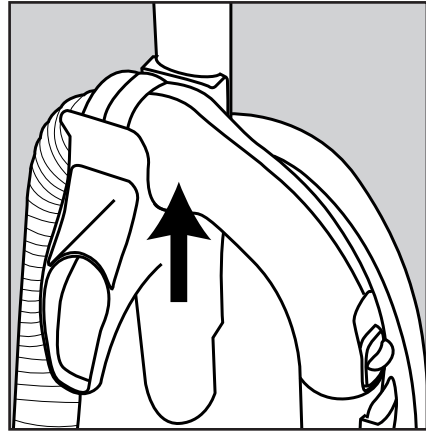

Attachment Cleaning

Your vacuum is equipped with a dusting brush, upholstery brush and crevice tool. Other tools are available at your Authorized Simplicity Retailer.

- Remove the cleaning wand from the vacuum and turn the tool activation dial to the "on" position. (See page 12)
- Insert any of the tools onto the end of the wand.

Dusting brush:

 
 
Ideal for table tops, shelves, blinds or hard surface floors.

Upholstery tool:


Ideal for soft surfaces like chairs and couches. Remove the dusting brush clip for upholstery cleaning.

Crevice tool:


Ideal for tight places like between seat cushions or corners.

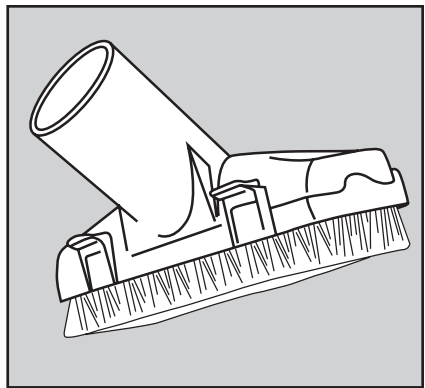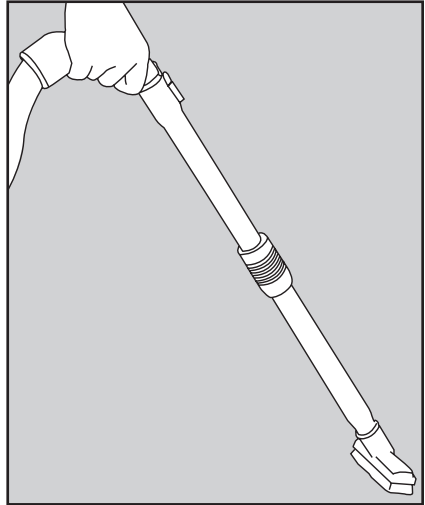

Dusting Tool

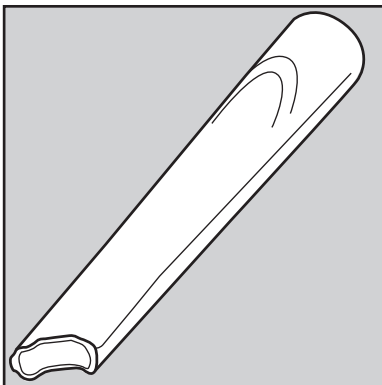 

Crevice Tool

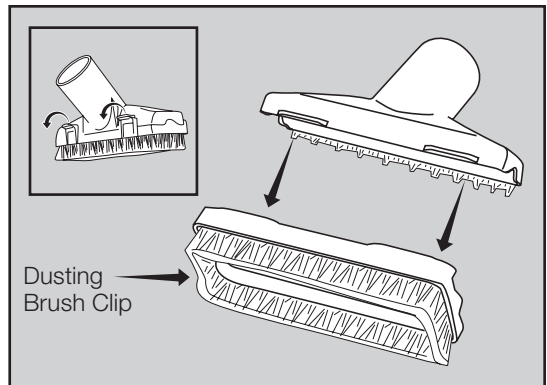 



Upholstery Brush

Attachment Cleaning

Cleaning tools continued...

Cleaning tools can also be attached to the curved handle for above-floor cleaning.

  
- Disconnect the wand from the curved handle by pressing the release button.
- Attach any of the cleaning tools directly to the curved handle.

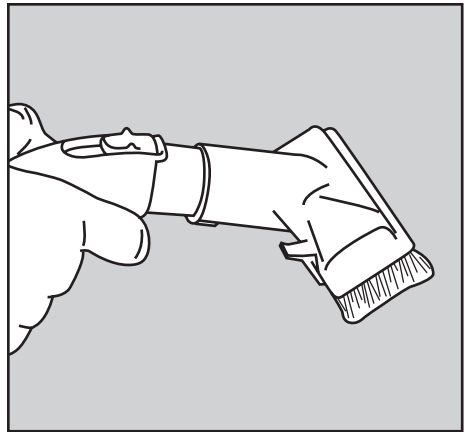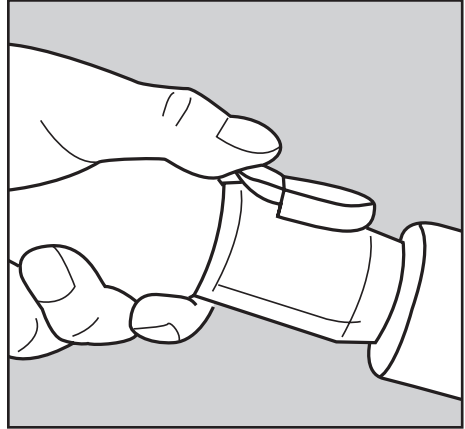

Adjusting the suction power for tool cleaning

Full suction power might be too strong for some cleaning situations. For example, reduced suction power would be appropriate for cleaning sheer curtains.

 - On the curved handle, locate the suction relief valve and slide it backward. This reduces the suction power coming through the tool. Slide the valve forward when finished to restore full suction power.

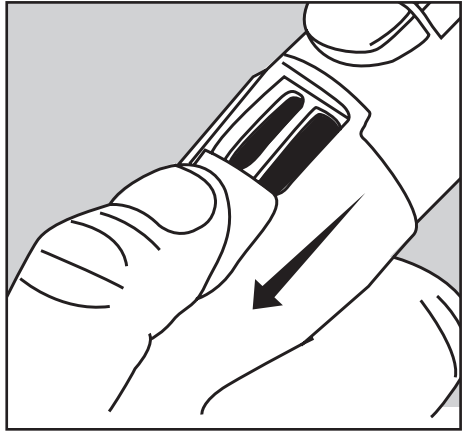


Attachment Cleaning

Optional premium stair cleaning kit

An accessory stair cleaning kit is available through your Authorized Retailer. The kit is a safe and effective way to keep your stairs clean.

 
- Remember to activate tool use, you must turn the tool activation dial to the “on” position.

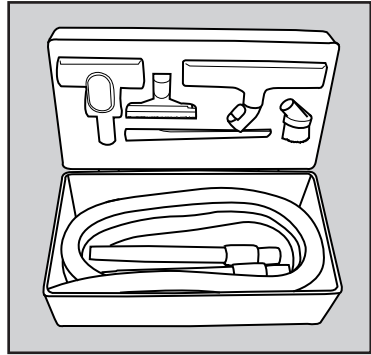

Optional stair cleaning kit


A basic stair cleaning kit is available through your Authorized Retailer. The kit contains a 12' extension hose and a turbo brush.

 - Remember to activate tool use, you must turn the tool activation dial to the “on” position.

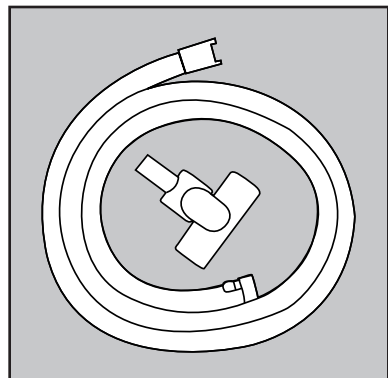


Optional hose extension

 In order to gain another six feet of tool cleaning reach, a small section of stretch hose can be spliced into the current hose arrangement with the optional hose extension kit available only through your Authorized Simplicity Retailer.

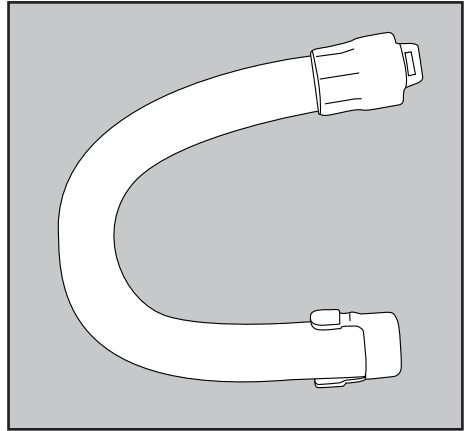

Disconnecting the hose for attachment cleaning

 To attach the longer hose from an optional attachment kit, disconnect the hose from the back of the vacuum by pressing the two buttons on the sides of the hose cuff. Then plug the longer hose into this port.

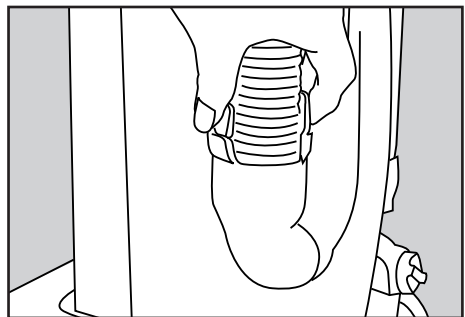

Maintenance and Care

 
When to change the vacuum bag

The full bag indicator light is designed to show when the bag is full or when there is a clog in the vacuum.

The system measures airflow and alerts the user when airflow is significantly reduced—most commonly from full bags and clogs.

The light could also come on when vacuuming fine powders such as flour or drywall dust. These materials can quickly block the bag pores, significantly reducing airflow before the bag appears to be full. The vacuum bag should still be changed.




Note: The vacuum bags are disposable and intended to only be used once. Do not attempt to reuse as suction and filtration performance would be greatly reduced.

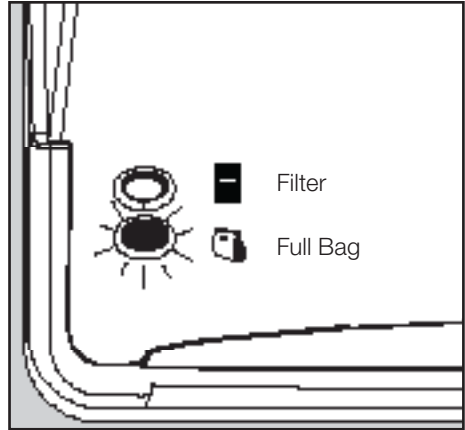

Yellow Warning Light

Replacing the vacuum bag

   - Open the bag compartment lid.
- Remove vacuum bag by pressing the bag tab.
- To insert a new bag, place the base of the bag collar on the bag supports. Then secure the top of the bag collar with the bag tab.
- Tuck the bag corners into the vacuum before replacing the bag compartment lid.
- Close lid and press latch back into place.

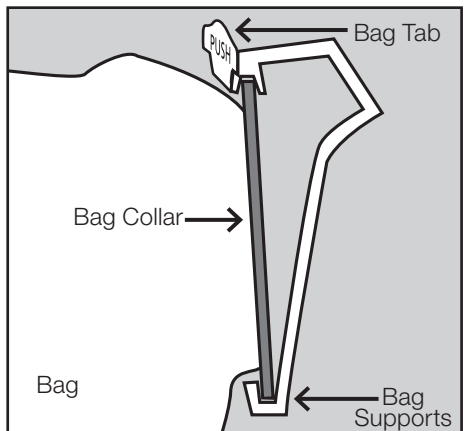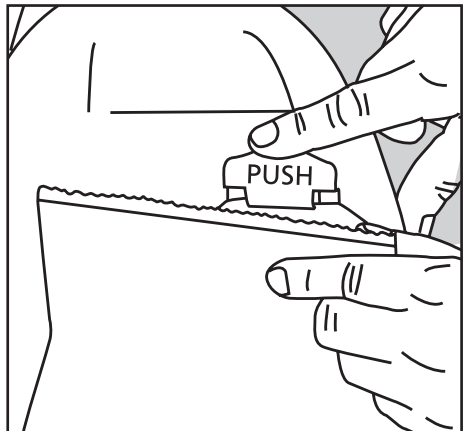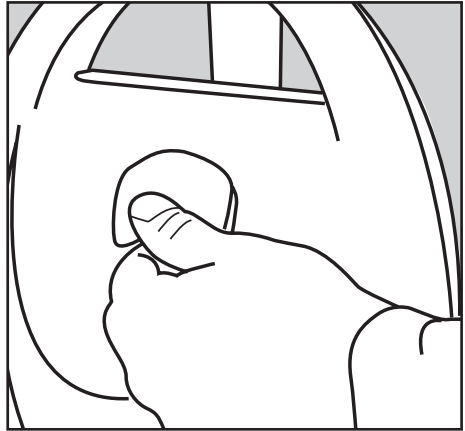

Maintenance and Care

When to change filters

The filters on your Synergy vacuum should be replaced after 25 hours of operation. The Synergy is equipped with a filter clock to monitor the actual hours of operation and will illuminate the change filter indicator light on the nozzle of your vacuum when 25 hours of operation have elapsed.

 
 
 
When the filters are replaced, reset the filter clock (while the vacuum is running) by removing cap and pressing the reset button when replacing filter. The change filter indicator light will once again only illuminate after the next 25 hours of operation.

Please Remove Cap And Press Reset Button When Replacing Filter. →

Replacing the HEPA exhaust filter


Note: Your vacuum is equipped with either the standard S-Class HEPA filter or the S-Class HEPA Plus filter. To avoid confusion when purchasing your filter, the item number is located on the side of the filter. Please give this number to your Authorized Simplicity Retailer when purchasing filters or bring your filter holder with you when purchasing new filters.

- Access the filter by pressing down on the release button located on top of the filter holder.
- Remove the used filter and replace with a new filter. **Note: S-Class HEPA filters cannot be washed and re-used.**

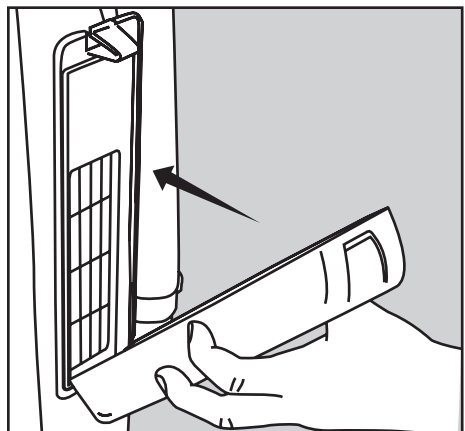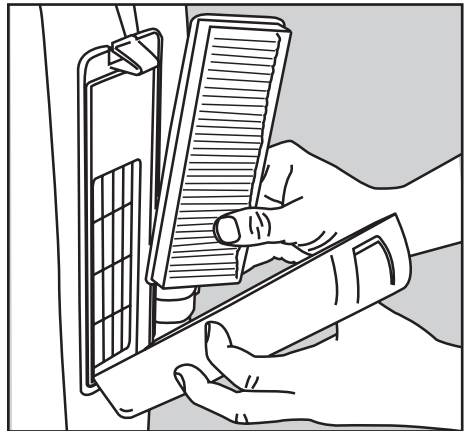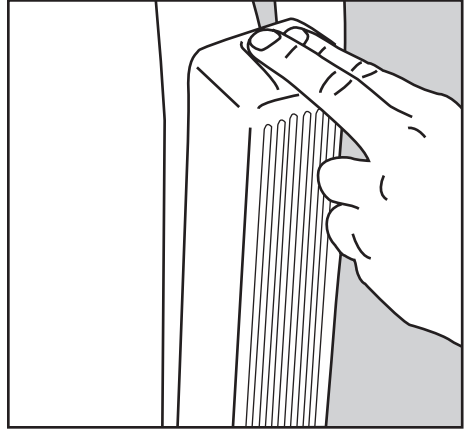



Replacing the HEPA exhaust filter cont.

 - Re-attach the exhaust filter holder to the vacuum by aligning the slot at the base of the filter holder with the clip on the vacuum and press firmly into place.

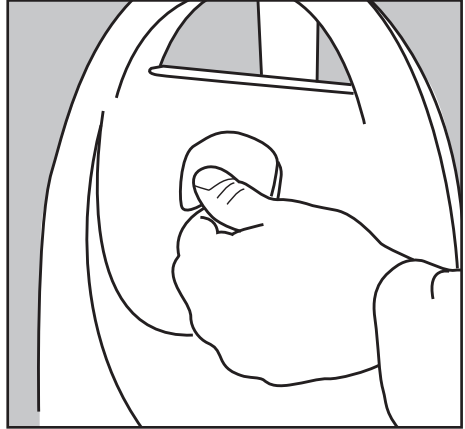

Replacing the charcoal filter

  - Open the bag compartment lid and locate the charcoal filter on the left side of the compartment.
- Using the latch on top, remove the charcoal filter holder.
- Remove and throw away the used filter.
- Insert new charcoal filter and snap the charcoal filter holder back into place.
- Close the bag compartment lid.

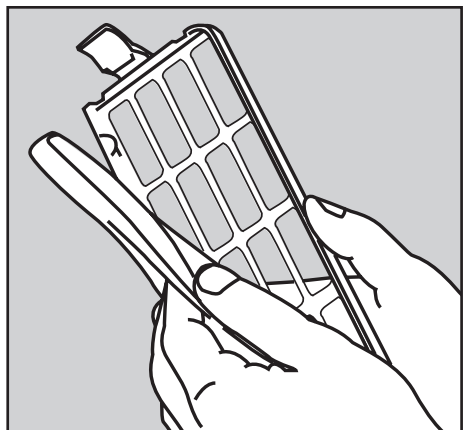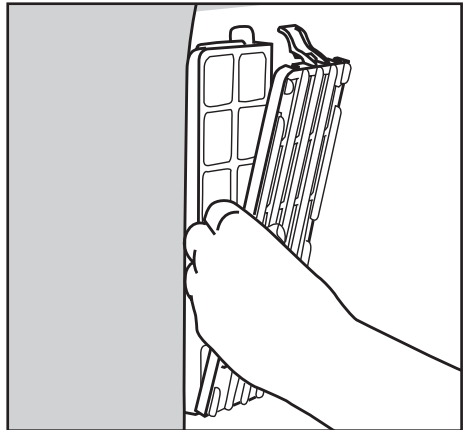

Maintenance and Care

Lifetime belt protection warranty

Your vacuum belt is covered with a lifetime warranty. Should the vacuum belt break, simply bring your vacuum or the broken belt to your Authorized Simplicity Retailer for a free replacement.

Annual checkup reminder

 
To keep your vacuum in peak operating condition, it is recommended you bring your Synergy to your Authorized Simplicity Retailer for an annual checkup. Your retailer will conduct a comprehensive examination to ensure your vacuum is in top operating condition.

Full bag or clog indicator light

The full bag indicator light is designed to show when the bag is full or when there is a clog in the vacuum.

The system measures airflow and alerts the user when airflow is significantly reduced—most commonly from full bags and clogs.

The light could also come on when vacuuming fine powders such as flour or drywall dust. These materials can quickly block the bag pores, significantly reducing airflow before the bag appears to be full. The vacuum bag should still be changed.

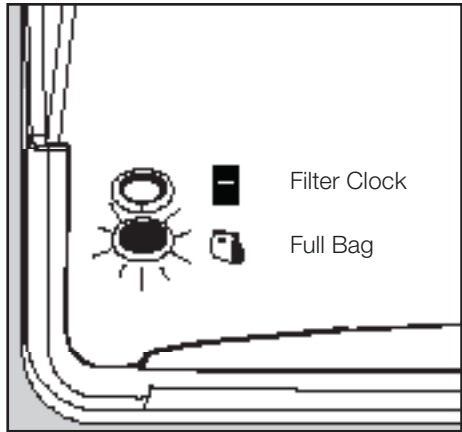


Yellow Warning Light

Change filter indicator light

The filters on your Synergy vacuum should be replaced after 25 hours of operation.

The Synergy is equipped with a filter clock to monitor the actual hours of operation and will illuminate the change filter indicator light on the nozzle of your vacuum when 25 hours of operation have elapsed.

 When the filters are replaced, reset the filter clock (while the vacuum is running) by removing cap and pressing the reset button when replacing filter. The change filter indicator light will once again only illuminate after the next 25 hours of operation.

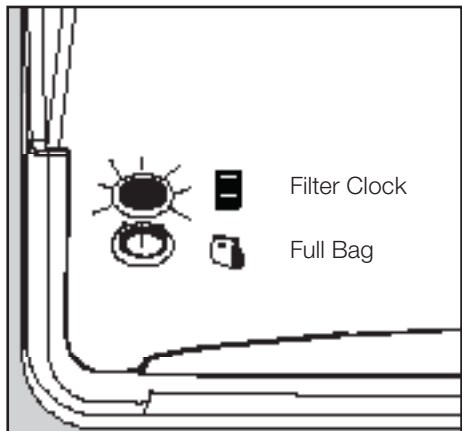


Blue Warning Light

Problem Solving Guide

Jammed brushroll

If an object, such as a throw rug or article of clothing is ever picked up into your vacuum, the vacuum will sense this “jammed brushroll” condition and turn off the brushroll. When this happens, the “brushroll warning” light on the top of the nozzle will light up in red.

 - Turn off the vacuum and remove the cause of the jam. Turn vacuum back on. If the brushroll is free of any object and the “brushroll warning” light is still lit, it’s likely the clogged condition is located in the vacuum motor fan. If so, please take your Synergy to your Authorized Simplicity Retailer for service.

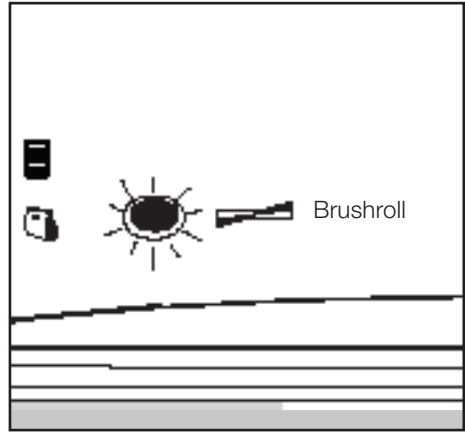

Red Warning Light

Thermal motor protection

Your Synergy is equipped with a safeguard to recognize when the vacuum heats up and shuts down to protect your vacuum cleaner. Note that when this happens, the headlamps are still on but the motors shut off. Common reasons why a vacuum may overheat include operating a vacuum with a full bag or when there is a clog in the vacuum.


- Unplug the vacuum.
- Inspect your vacuum for a full bag condition or a hose clog and correct the problem. Locate the Thermal Motor Reset button on the back of the vacuum. Press button and resume vacuuming.

If problem continues, contact your Authorized Simplicity Retailer.

Thermal Reset

1. Unplug machine	3. Correct problem
2. Locate problem source (clogged hose or full bag)	4. Press reset button

 If problem persists, consult owner's manual or contact retailer.

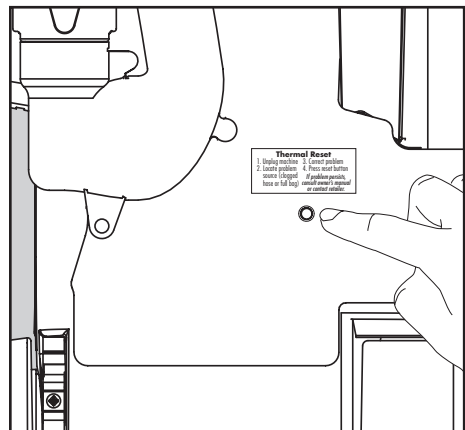

Trouble Shooting

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Vacuum won't turn on	<ul style="list-style-type: none"> • Power cord not firmly plugged in • Blown fuse or tripped breaker • Needs service 	<ul style="list-style-type: none"> • Plug unit in firmly • Check house fuse or breaker. Replace fuse / reset breaker. • Take to Authorized Retailer (1-888-9-SIMPLY)
Vacuum won't pick up or low suction	<ul style="list-style-type: none"> • "Carpet" switch not on • Vacuum bag full • Clogged filter • Hose clogged • Worn brush strips • Broken belt • Tool activation dial turned on 	<ul style="list-style-type: none"> • Turn "carpet" switch on • Install new bag • Install new filter • Remove obstacle • Replace brush strips • Take to Authorized Retailer for belt replacement • Turn tool activation dial to "off" position
Dust escaping from vacuum	<ul style="list-style-type: none"> • Dust cover not seated properly • Filter not installed correctly • Vacuum bag not installed correctly 	<ul style="list-style-type: none"> • Reinsert the dust cover and secure latch • Review filter installation (page 20) • Review bag installation (page 19)

Any other service should be done by an Authorized Service Representative.

Service 1-888-9-SIMPLY

To locate your nearest retailer, visit our website at
www.simplicityvac.com

Warranty

What is Covered:

This warranty covers any defects in material and workmanship in your new Simplicity Synergy vacuum.

How Long Coverage Lasts:

Warranty coverage for your Simplicity vacuum lasts six years for household use. Synergy Household Vacuum Cleaners used professionally are only warranted for ninety days.

What is Not Covered:

- Damage to the vacuum which occurs from neglect, abuse, alterations, accident, misuse, or improper maintenance.
- Normal replacement items: disposable bags, disposable filters and agitator brushes.

What Simplicity Vacuums Will Do:

This warranty provides, at no cost to you, all labor and parts to keep this vacuum in correct operating condition during the warranted period.

How to Get Service:

Warranty service can only be obtained by presenting the vacuum to an Authorized Simplicity Retailer. Unless the warranty card has been mailed in or registered on-line, a proof-of-purchase and product serial number will be required before service is rendered.

To locate your nearest Simplicity Retailer, please call 1-888-9-SIMPLY or visit the Simplicity website at www.simplicityvac.com.

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER WARRANTIES WHETHER WRITTEN, ORAL, EXPRESSED OR IMPLIED (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). THIS WARRANTY DISCLAIMS LIABILITY FOR INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

How State Law Applies:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Register your warranty on-line at www.simplicityvac.com

Owner's Warranty Information

keep this for your records...

Date of purchase _____

Serial number _____

Model number _____

Filter type _____

Purchased from:

Store name _____

Address _____

City, State, Zip _____

Telephone _____

Simplicity[®]
The vacuum you'll *live* over.[™]

Notes

Simplicity[®]
The vacuum you'll *flip* over.[™]

www.simplicityvac.com